

## EXTERNAL FEATURE - USER CONFIGURATION

The Reprint Button and LEDs may be used to select one of 15 configurable options (default = mode 1). To enter setup mode, power up the HPI-3010 with the printer disconnected (confirmed by a slow steady blink of the PRN LED). Next, press and hold the Reprint button for about 6 seconds. The PRN LED will stop blinking and the LEDs will show the selected configuration mode as a binary number (1-15). The configuration options are as follows:

**Table One – Configuration Options**

Mode	RDY	HOST	PRN	BUSY	Selected Option
1	Off	Off	Off	On	US Letter, Portrait, SFFS On (Default Mode)
2	Off	Off	On	Off	US Letter, Landscape, SFFS On
3	Off	Off	On	On	US Letter, Portrait, SFFS Off
4	Off	On	Off	Off	US Letter, Landscape, SFFS Off
5	Off	On	Off	On	A4 Paper, Portrait, SFFS On
6	Off	On	On	Off	A4 Paper, Landscape, SFFS On
7	Off	On	On	On	A4 Paper, Portrait, SFFS Off
8	On	Off	Off	Off	A4 Paper, Landscape, SFFS Off
9	On	Off	Off	On	Reserved
10	On	Off	On	Off	Reserved
11	On	Off	On	On	Reserved
12	On	On	Off	Off	Reserved
13	On	On	Off	On	Reserved
14	On	On	On	Off	Reserved
15	On	On	On	On	Reserved

In setup mode, pressing and releasing the Reprint Button advances through the configuration modes. Once the desired option mode is shown on the LEDs, wait 20 seconds for the new setting to be saved in memory, then remove power from the HPI-3010 to exit setup mode.